



QUICK DOs and DON'Ts

- **Do** test your home at least once a year—either in the hottest part of the summer or coldest part of the winter
- **Do** hang your kit on the lowest livable floor of your home
- **Do** hang your kit in a place where you spend a lot of time—like a living room or bedroom
- **Do** hang your kit 2 to 6 feet from the floor
- **Don't** move or change the location of the kit while testing
- **Don't** put your kit in a room with high humidity—like a bathroom
- **Don't** put your kit directly in front of a vent, door, window, or underneath a ceiling fan that is operating
- **Don't** test a crawl space

You can visit www.radon.com for more information!

READ THIS FIRST!

- Carefully open the plastic wrapper around your test kit
- Inside, you will find your test kit and a folded piece of paper that contains your instructions
- Locate your 7 digit test kit number. **YOU NEED TO COMPLETE THIS STEP IN ORDER TO GET YOUR RESULTS BACK!!**
- Fill out the blanks located on your test kit according to the directions on the folded piece of paper

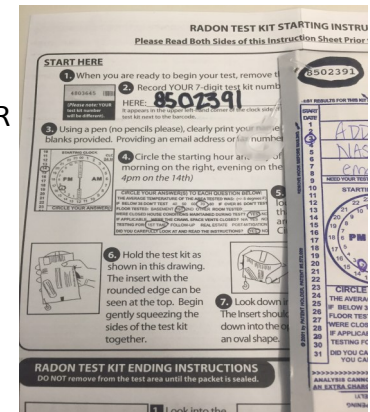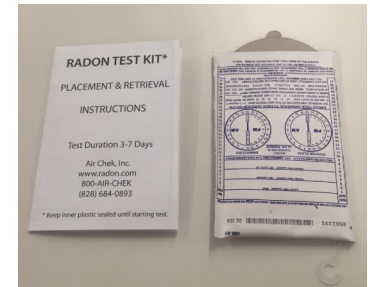

In this example we started the test at 2:00pm on the 3rd day of the month, and ended at 5:00pm on the 6th day of the month.

The temperature in the house was 74 degrees, and the test was done on the 2nd floor.



QUICK DOs and DON'Ts

- **Do** test your home at least once a year—either in the hottest part of the summer or coldest part of the winter
- **Do** hang your kit on the lowest livable floor of your home
- **Do** hang your kit in a place where you spend a lot of time—like a living room or bedroom
- **Do** hang your kit 2 to 6 feet from the floor
- **Don't** move or change the location of the kit while testing
- **Don't** put your kit in a room with high humidity—like a bathroom
- **Don't** put your kit directly in front of a vent, door, window, or underneath a ceiling fan that is operating
- **Don't** test a crawl space

You can visit www.radon.com for more information!

READ THIS FIRST!

- Carefully open the plastic wrapper around your test kit
- Inside, you will find your test kit and a folded piece of paper that contains your instructions
- Locate your 7 digit test kit number. **YOU NEED TO COMPLETE THIS STEP IN ORDER TO GET YOUR RESULTS BACK!!**
- Fill out the blanks located on your test kit according to the directions on the folded piece of paper

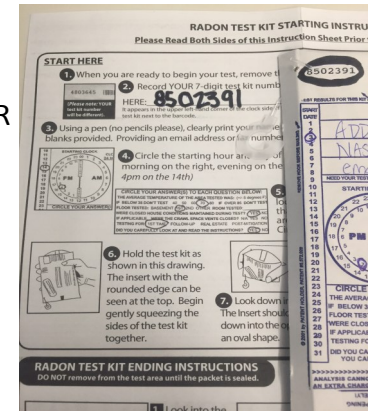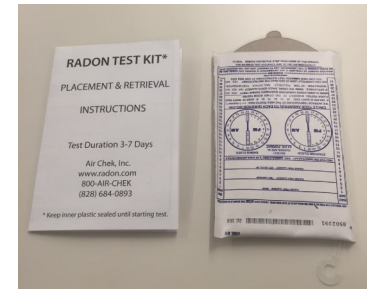

8502391

NAME _____

ADDRESS _____

NASHVILLE, TN 37245

email@email.com

STARTING CLOCK: 2:00 PM

ENDING CLOCK: 5:00 PM

CIRCLE YOUR ANSWER(S) TO EACH QUESTION BELOW:

THE AVERAGE TEMPERATURE OF THE AREA TESTED WAS: (+/- 5 degrees F) 70

IF BELOW 35 DON'T TEST 40 50 60 70 80 IF OVER 85 DON'T TEST

FLOOR TESTED: BASEMENT 1ST 2ND OTHER ROOM TESTED

WERE CLOSED HOUSE CONDITIONS MAINTAINED DURING TEST? YES NO

IF APPLICABLE, WERE THE CRAWL SPACE VENTS CLOSED? NA YES NO

TESTING FOR 1ST TIME FOLLOW-UP REAL ESTATE POST-MITIGATION

DID YOU CAREFULLY LOOK AT AND READ THE INSTRUCTIONS? YES NO

YOU CAN VIEW ANIMATED TEST INSTRUCTIONS AT OUR WEBSITE: www.radon.com

WARNING: ANALYSIS CANNOT BE FINALIZED IF ANY INFORMATION IS MISSING AND THERE MAY BE MISSING DATA.

In this example we started the test at 2:00pm on the 3rd day of the month, and ended at 5:00pm on the 6th day of the month.

The temperature in the house was 74 degrees, and the test was done on the 2nd floor.